

USING KML22 MANUAL JOINER RINGS

REQUIRED COMPONENTS




PART 'A' REPAIR RING



PART 'B' REPAIR RING


STEP 1:

Remove damaged ring.

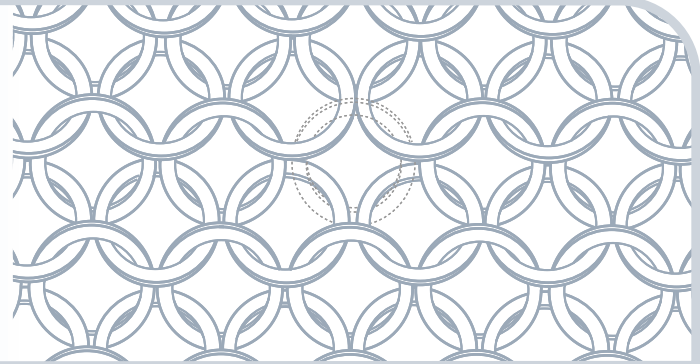

STEP 2:


Thread repair ring part 'A' with its pins facing up.

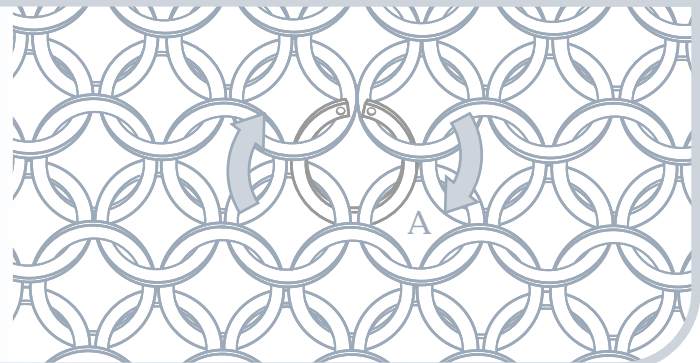

STEP 3:

Thread repair ring part 'B' with pins facing down over repair ring part 'A'.


Orientate repair ring part 'B' to align with repair ring part 'A's pins.

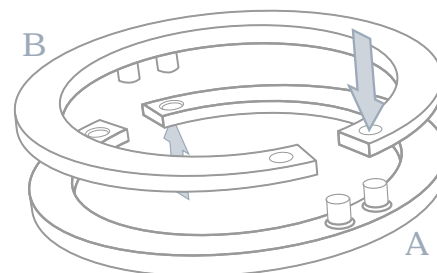




**STEP 4:**

Place holes over pins and press together, making sure holes are all the way down the pins and the rings are sitting together flush.

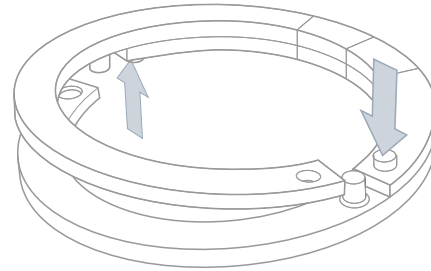

**STEP 5:**

Using flat faced pliers (not serrated teeth), flatten pins together to secure ring.

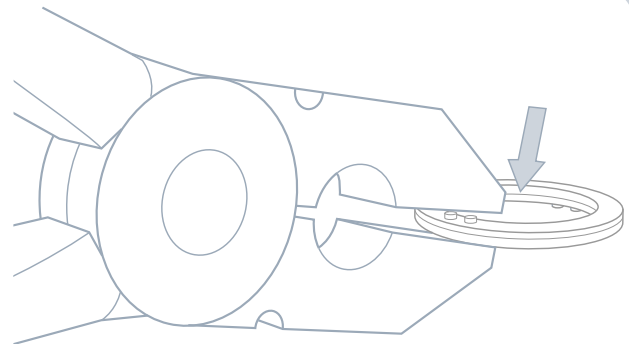

Completed repair ring.

